



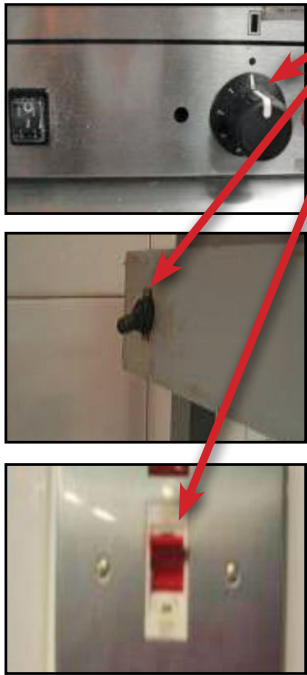








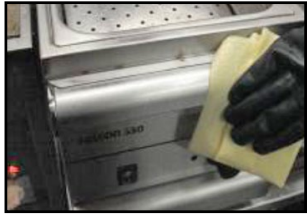

Cleaning the Falcon chip scuttle – HOT CLEAN

Cloth	Yellow
PPE	• Heat resistant gloves • Apron • Goggles • Rubber gloves   
Chemicals	• Cleaner & degreaser (trigger bottle) • Sanitiser
Reference	• Safety policies • COSHH manual • Risk assessment manual • DMLB
Equipment	• Green scourer • Blue roll
VideoSOP	To be used together with this written SOP. Tap here to play 

Step 1		<p>Switch off:</p> <ul style="list-style-type: none">• Chip scuttle.• Heat lamp.• Isolator switch. <p>• Allow the chip scuttle to cool for 15 minutes.</p>
Step 2		<p>For dry heat models:</p> <ul style="list-style-type: none">• Remove the drip tray, metal container, element cover and clean in dishwasher.• Allow to air dry.

Private and confidential – for internal use only

Cleaning the Falcon chip scuttle – HOT CLEAN

Step 2b		For wet heat models (identified by handles): <ul style="list-style-type: none"> • Remove the drip tray, metal container and water bath and clean in dishwasher. • Allow to air dry.
Step 3		For dry heat models only: <ul style="list-style-type: none"> • Remove food debris from the inside of the chip scuttle and discard. • Using cleaner & degreaser (trigger bottle) and a green scourer clean the inside of the chip scuttle paying particular attention to the area around the element. • Do not wet the element. • Dry the inside of the element area thoroughly with blue roll.
Step 4		For both models: <ul style="list-style-type: none"> • Using cleaner & degreaser (trigger bottle) and a yellow cloth clean the overhead hot lamp unit. • Do not wet the hot lamp element.
Step 5a		For dry heat models <ul style="list-style-type: none"> • Replace element cover, metal container and drip tray.
Step 5b		For wet heat models only: <ul style="list-style-type: none"> • Fill the water bath with water to the fill line and place into chip scuttle. • Replace metal container and drip tray.
Step 6		<ul style="list-style-type: none"> • Using cleaner & degreaser (trigger bottle) and a yellow cloth clean the outside of the chip scuttle paying particular attention to the sides and work surface.
Step 7		<ul style="list-style-type: none"> • Ensure that hand contact points are sanitised at regular intervals during service and at the end of the day. • Report any maintenance issues via the property maintenance system. • If there is a high level of carbon build up, use cleaner & degreaser (trigger bottle) and a green scourer to remove it.